

# **Fire Pit Instructions**

- 1. Take cover off fire pit**
- 2. Remove front panel of pit to access controls (Underneath tile table top, on the front side of fire pit facing the house, locate handle, then pull up slightly to remove door)**
- 3. Turn on the gas line so valve handle is vertical.**
- 4. Turn on the timer knob located behind gas valve**
- 5. Turn on the igniter button**
- 6. To ignite, push both buttons in simultaneously for a full minute. If it doesn't lite, use a lighter to light it, but continue to hold the buttons down a full minute after the flame is lit to prevent the gas from shutting off (see 9 below)**
- 7. Adjust the gas knob as needed for the flame**
- 8. Turn off the gas valve and timer when done, and replace the cover and door.**
- 9. Please note that for safety in preventing a gas leak, the fire pit is equipped with a thermocouple that will shut off the gas supply to the fire ring if it isn't hot enough. If you see the burner light, then the flame dies when you let go of the igniter button, it is because you did not allow enough time for the thermocouple to heat up. The cooler the weather, the longer you have to hold it.**

**IMPORTANT:** During winter months, it is very important to put the cover onto the firepit after it has cooled. Otherwise snow and ice will freeze around the burner and prevent it from working the next time it is used.