



# MOVIE THEATER AV INSTRUCTIONS

- Once the projector is turned off, it will not turn back on for 10 minutes to allow the bulb to cool
- The remote takes a few seconds to send out the various signals. Be patient after selecting a command.
- Please call with ANY questions. Do NOT unplug or alter any electrical component. Please respect the speakers and listen at a comfortable indoor sound level. You will be responsible for blown speakers as well as AV service call if you disconnect any electronic equipment.
- When done using, press the power  button.

## To Start An Activity


Press  on remote to see list of options

## To Watch DirecTV, Amazon Video, Netflix, Hulu, AppleTV, Disney+, HBO Max, Listen to Music, Showtime, Starz, Cinemax, ESPN+, etc

- Press the **FireTV** Button. 
- Press Home on the FireTv remote. Use this remote to navigate through FireTV
- To watch DirecTv, select  in FireTV. Press  on remote to see Guide. We get most premium channels, sports pack, etc.
- The volume, and system on/off is controlled by the main black Pro Remote



OR

- Press the **AppleTV** Button.
- Press Menu button on Pro remote to view apps/channels and navigate through AppleTV.
- To watch DirecTv, select  in AppleTV.



## To Watch DVD

- Press the **DVD/BD** Button on the remote
- Insert DVD into DVD player
- Use main pro remote to control it.




- Note: if you turn on the DVD player manually to insert a DVD, then press Watch a DVD, it will turn the player off instead of on. DVD remote functions toggle on/off.

### **Presentation from Computer**


- Start with the system off.
- Press Wireless Presentation icon  on the remote
- Ignore options on the screen. Instead:
- Follow “connect to wireless display” instructions for your particular device
- Connect to Theater Projector on your device

OR

- Press HDMI cable **Presentation** on the remote. 
- The HDMI plug is located on left cabinet behind the theater seats. A cord is located in the left cabinet of the bar behind the theater seats. Plug in to your computer.
- Some computers will require you to select the audio output. In windows 10 it's under “manage audio devices”.

### **Play Wii**

– **Note: Hundreds of Games are on the wii external hard drive.**

- Press the **Wii** Button on the remote 
- Pick up a wii remote and press the power button to turn on the wii system or walk to the wii and turn on. Operate the wii with wiimote.
- Select USB Loader Gx.
- Click Start
- Scroll through games to find the one you want to play. Click on the game.
- To start the game, click on the image of the game disk.
- To return to the game list, press the HOME button, then Go To Wii Menu.
- Note: If you have any problems with the wii or get stuck, go to the back of the wii and pull the power plug, reinsert, and power back on. Do NOT remove the SD card or usb cord from the wii under any circumstance. Call if you have problems.