


## CONTROL PANEL AND REMOTE

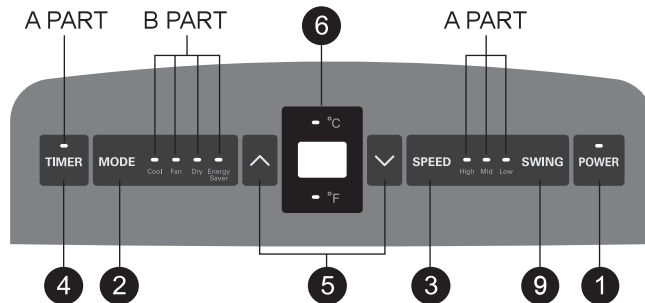

Operation of functions is the same when using the remote or the control panel, unless otherwise stated.

For detailed instructions on each function, see the following pages.

### 1 POWER ON/OFF

Turns the air conditioner on and off. When turning on, a rising tone will sound to confirm. When turning off, a descending tone will sound.

### 2 MODE

Switches the air conditioner between COOL, FAN, DRY, and ENERGY SAVER modes. The active mode will be shown in the LED display.

### 3 FAN

Adjusts the circulation fan speed among low (F1), medium (F2), and high (F3).

### 4 TIMER

Allows you to set a delay from 1 to 24 hours that will turn the air conditioner on or off automatically.

### 5 ▲ / ▼ (TEMP/TIMER)


Adjust the set temperature up or down, or adjust the timer delay time.

### 6 LED DISPLAY

A PART shows fan speed or the selected TIMER delay. B PART shows the active mode (COOL, FAN, DRY and ENERGY SAVER). LED DISPLAY shows the set temperature (°C or °F), Auto clean, Water full.

### 7 °C/°F

Switches the temperature display between degrees Celsius (°C) and degrees Fahrenheit (°F). It is also available by pressing the ▲ button and ▼ button on the control panel at the same time.

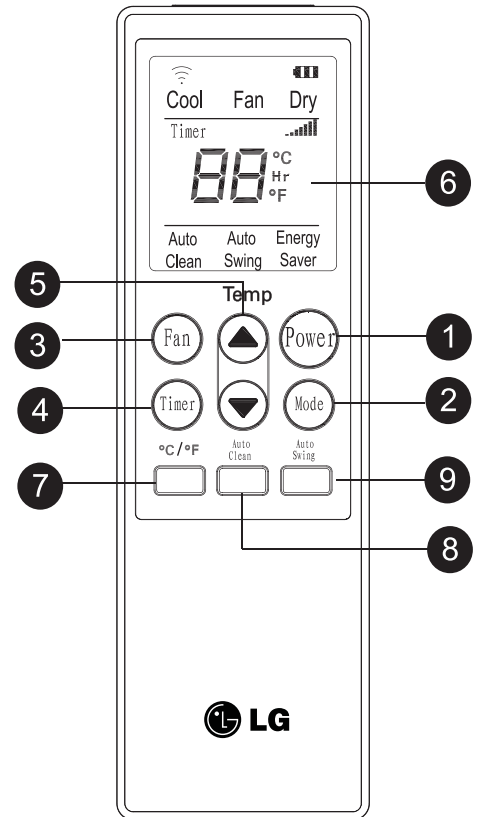

### 8 AUTO CLEAN

Removes moisture from the heat exchangers and helps prevent odor from forming. This function can be activated from the remote only.

### 9 AUTO SWING

Sets the motorized air discharge to oscillate, improving air circulation in the room. This function can be activated with the remote and control panel.

## NOTE AUTO RESTART

If there is a power failure during operation, the unit will resume operation with the same settings as before the power failure.